



Garden Furniture Cleaner for Resin

- Removes dirt, grease and scuff marks
- Use neat to remove stubborn stains
- Restores lustre to the surface



USAGE

Interior and exterior

COVERAGE

200 ml in 5 L water

APPLICATION

Cloth or sponge

DRYING TIME

Min 30 mins

TOOL CLEANING

Water

Product use

Liberon Garden Furniture Cleaner is a non-aggressive cleaner for the regular maintenance of resin garden furniture. It will remove general dirt and stubborn marks without damaging the surface. Suitable for most types of resin furniture Liberon Garden Furniture Cleaner restores lustre to the surface and leaves a matt finish.

Preparation

Shake/stir well before use. Brush down the furniture to remove all surface dust and dirt.

Application

For general cleaning add approximately 200 ml of Garden Furniture Cleaner to 5 L of warm water. Wash the furniture using a cloth or sponge, rinse thoroughly with clean water and allow to dry. To remove stubborn marks treat the affected area with a small amount of neat Garden Furniture Cleaner, using a soft scrubbing brush or cloth. To aid drying time wipe over with a dry cloth.

Important: Always test product on a spare surface or inconspicuous area for compatibility and end result.

Cleaning and maintenance

Repeat cleaning procedure as and when required.

Packaging

Garden Furniture Cleaner is available in 1L containers.

Health and Safety

Keep out of the reach of children. Use only in well-ventilated areas. Do not allow to freeze. Contains perfume. May produce an allergic reaction.