

- ▶ TIP-ON for doors
- ▶▶ TIP-ON 956x

## TIP-ON 956. – short version with magnet



- For overlay fronts (up to approx. 1300 mm height)
- For use with unsprung Blum hinges
- For drilling or in combination with adapter plates
- Output path approx. 17 mm
- Setting +4/–1 mm

### Order information

Colour	Material	Part no.
SW   TS   R7036	Nylon	956.1004


### Composed of:

- 1 x TIP-ON 956. – short version with magnet
- 1 x Glue-on catch plate  
Not suitable for powder-coated, waxed or oiled surfaces
- 1 x Screw-on catch plate

### Colour

SW	Silk white
TS	Terra black
R7036	RAL 7036 platinum grey

### Planning

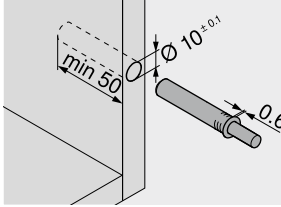


### Front gap




( ) Screw-on catch plate

### Glue-on catch plate

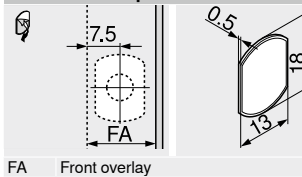

FA Front overlay

### Screw-on catch plate

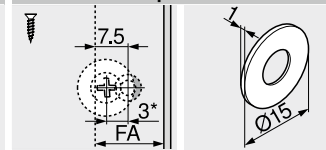

FA Front overlay  
\* 3 mm offset installation

## TIP-ON 956A – long version with magnet



- For overlay fronts (starting at approx. 1300 mm height) and all inset applications
- For use with unsprung Blum hinges
- For drilling or in combination with adapter plates
- Output path approx. 38 mm
- Setting +4/–1 mm

### Order information

Colour	Material	Part no.
SW   TS   R7036	Nylon	956A1004


### Composed of:

- 1 x TIP-ON 956A – long version with magnet
- 1 x Glue-on catch plate  
Not suitable for powder-coated, waxed or oiled surfaces
- 1 x Screw-on catch plate


### Colour

SW	Silk white
TS	Terra black
R7036	RAL 7036 platinum grey

### Planning

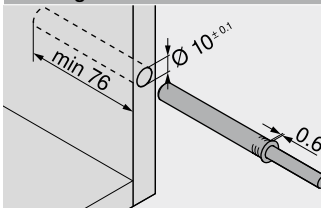


### Front gap

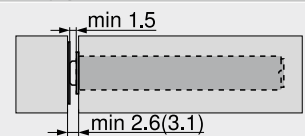


( ) Screw-on catch plate

### Glue-on catch plate

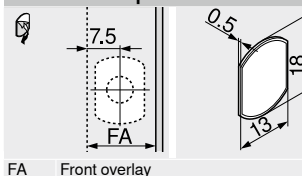

FA Front overlay

### Screw-on catch plate

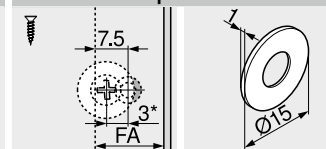

FA Front overlay  
\* 3 mm offset installation

## TIP-ON 956A – long version with bumper



- For use with sprung Blum hinges
- For drilling or in combination with adapter plates
- Output path approx. 38 mm
- Setting +4/–1 mm

### Order information

Colour	Material	Part no.
SW   TS   R7036	Nylon	956A1006


### Composed of:

- 1 x TIP-ON 956A – long version with bumper
- No catch plate needed (we recommend using a catch plate for very soft surfaces)


### Colour

SW	Silk white
TS	Terra black
R7036	RAL 7036 platinum grey

### Planning

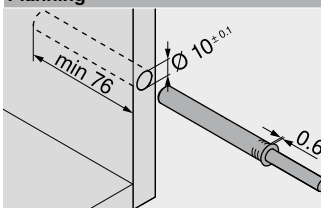

### Front gap

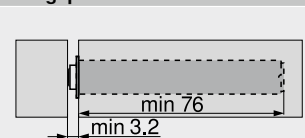

### Page instructions

Overview – TIP-ON for doors	185
Accessories – straight adapter plates	187
Accessories – cruciform adapter plates	187

### Assembly, removal and adjustment

Short-URL  
[www.blum.com/a230](http://www.blum.com/a230)



### Assembly

Drilling template for BLUMOTION   TIP-ON	632
Positioning template for catch plate	652
MINIPRESS top with EASYSTICK	576
MINIPRESS top	580

### Inline adapter plate – short version

20/17





- Fixing with chipboard screws  $\varnothing$  3.5 or  $\varnothing$  4 mm
- Alternative assembly with system screws
- TIP-ON must be ordered separately


#### Order information

Colour	Material	Part no.
SW   TS   R7036	Nylon	956.1201
NI-L		
SW	Silk white	
TS	Terra black	
R7036	RAL 7036 platinum grey	
NI-L	Nickel lacquered	


#### Planning

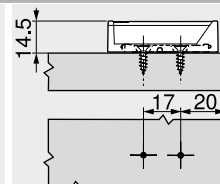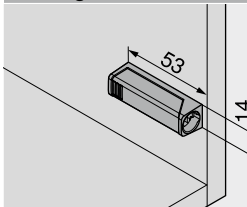

#### Front gap

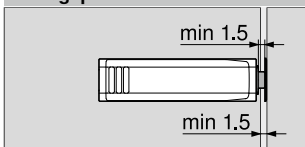

#### Catch plate

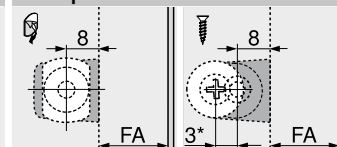

FA Front overlay  
\* 3 mm offset installation

### Inline adapter plate – long version

20/32





- Fixing with chipboard screws  $\varnothing$  3.5 or  $\varnothing$  4 mm
- Alternative assembly with system screws
- TIP-ON must be ordered separately


#### Order information

Colour	Material	Part no.
SW   TS   R7036	Nylon	956A1201
NI-L		
SW	Silk white	
TS	Terra black	
R7036	RAL 7036 platinum grey	
NI-L	Nickel lacquered	


#### Planning

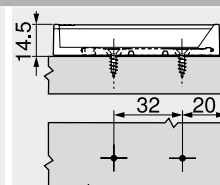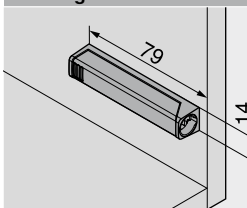

#### Front gap

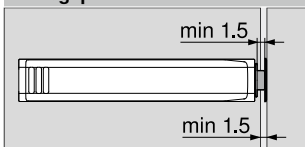

#### Catch plate

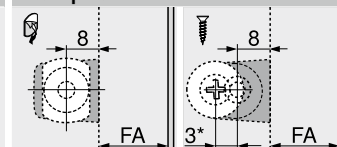

FA Front overlay  
\* 3 mm offset installation

### Cruciform adapter plate – long version

37/32





- Fixing with chipboard screws  $\varnothing$  3.5 or  $\varnothing$  4 mm
- Alternative assembly with system screws
- TIP-ON must be ordered separately

#### Order information

Colour	Material	Part no.
R7036	Nylon	956A1501
R7036	RAL 7036 platinum grey	


#### Planning

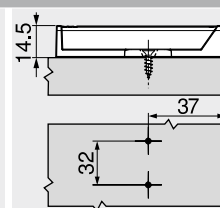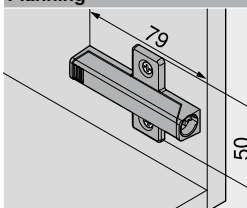

#### Front gap



#### Catch plate

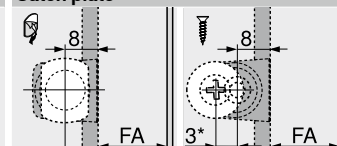

FA Front overlay  
\* 3 mm offset installation

#### Page instructions

Overview – TIP-ON for doors

185

Assembly, removal and adjustment



#### Assembly

Template	630
Drilling template for mounting plates	631
Positioning template for catch plate	652
MINIPRESS top with EASYSTICK	576
MINIPRESS top	580
MINIPRESS P	592

MINIPRESS M

596

Short-URL

[www.blum.com/a230](http://www.blum.com/a230)